


# MARCY<sup>®</sup>

## REGENERATING MAGNETIC ELLIPTICAL ME-704

EN

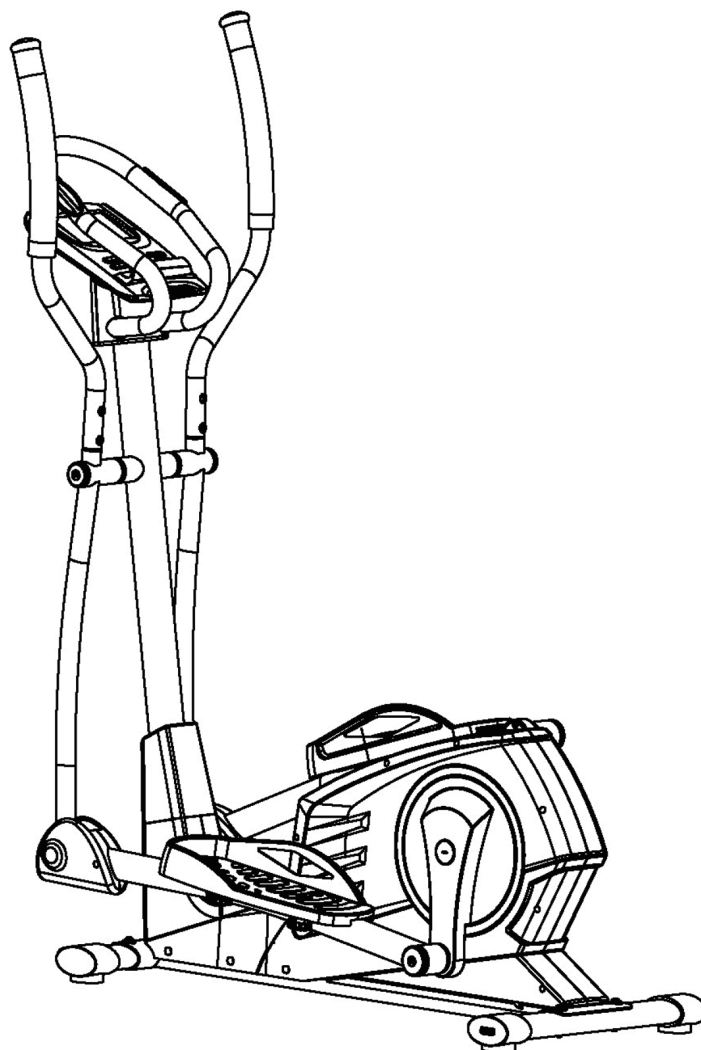

Distributed By:  
Pure-Tec Limited  
[www.puretecfitness.com](http://www.puretecfitness.com)

200415

[www.puretecfitness.com](http://www.puretecfitness.com)

---

## TABLE OF CONTENTS

BEFORE YOU BEGIN.....	1
IMPORTANT SAFETY NOTICES.....	2
EXERCISE GUIDELINES.....	3
IMPORTANT ASSEMBLY INFORMATION.....	5
CARE AND MAINTENANCE, WEIGHT CAPACITY AND DIMENSIONS.....	6
CONSOLE INSTRUCTIONS.....	6
PARTS LIST.....	14
EXPLODED DIAGRAM.....	17
WARRANTY.....	21
ORDERING PARTS.....	21

## IMPORTANT SAFETY NOTICE

### PRECAUTIONS

This Elliptical bike is built for optimum safety. However, certain precautions apply whenever you operate a piece of the Elliptical bike. Be sure to read the entire manual before you assemble or operate your bike. In particular, note the following safety precautions: **Keep children and pets away from the machine at all times. DO NOT leave children unattended in the same room with the bike.**

1. Only one person at a time should use the bike.
2. If the user experiences dizziness, nausea, chest pain, or any other abnormal symptoms, STOP the workout at once. CONSULT A PHYSICIAN IMMEDIATELY.
3. Position the machine on a clear, levelled surface. DO NOT use the bike near water or outdoors.
4. Keep hands away from all moving parts.
5. Always wear appropriate workout clothing when exercising. DO NOT wear robes or other clothing that could become caught in the bike. Running or aerobic shoes are also required when using the bike.
6. Use the machine only for its intended use as described in this manual. DO NOT use attachments not recommended by the manufacturer.
7. Do not place any sharp object around the bike.
8. Disabled person should not use the bike without a qualified person or physician in attendance.
9. Before using the bike to exercise, always do stretching exercises to properly warm up.
10. Never operate the machine if the bike is not functioning properly.
11. Read all warnings posted on the exercise bike.
12. Inspect the exercise bike for worn or loose component prior to use. Tighten/replace any loose or wore components prior to use.
13. Care should be taken in mounting or dismounting the Elliptical bike.
14. **This Elliptical bike is for consumer and home use only.**

**WARNING: BEFORE BEGINNING ANY EXERCISE PROGRAM, CONSULT YOUR PHYSICIAN. THIS IS ESPECIALLY IMPORTANT FOR INDIVIDUALS OVER THE AGE OF 35 OR PERSONS WITH PRE-EXISTING HEALTH PROBLEMS. READ ALL INSTRUCTIONS BEFORE USING ANY FITNESS EQUIPMENT. PURE-TEC LIMITED ASSUMES NO RESPONSIBILITY FOR PERSONAL INJURY OR PROPERTY DAMAGE SUSTAINED BY OR THROUGH THE USE OF THIS PRODUCT.**


**SAVE THESE INSTRUCTIONS.**

## EXERCISE GUIDELINES

Using your **REGENERATING MAGNETIC ELLIPTICAL BIKE** will provide you with several benefits, it will improve your physical fitness, tone muscle and in conjunction with a calories controlled diet help you lose weight.


### 1. The Warm-Up Phase

This stage helps get the blood flowing around the body and the muscles working properly. It will also reduce the risk of cramp and muscle injury. It is advisable to do a few stretching exercises as shown below. Each stretch should be held for approximately 30 seconds, do not force or jerk your muscles into a stretch - if it hurts, STOP.

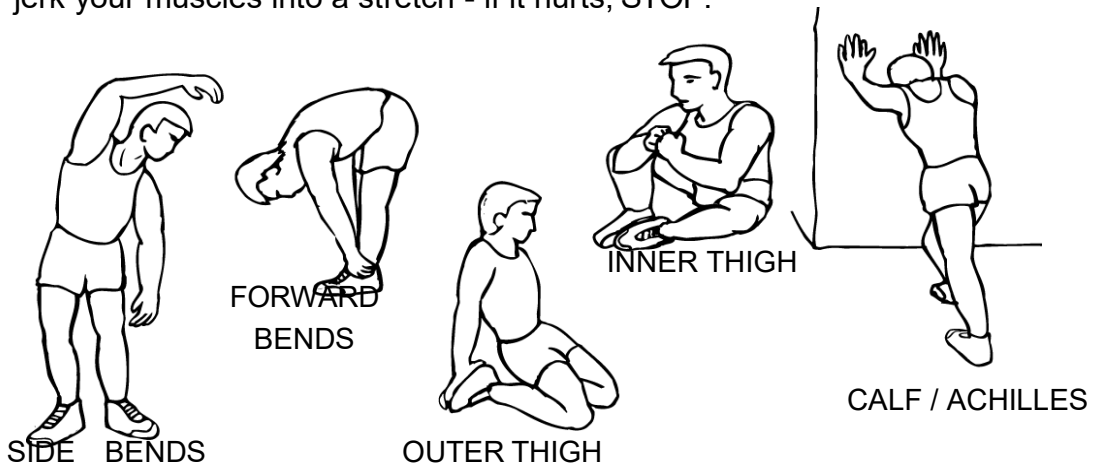

### 2. The Exercise Phase

This is the stage where you put the effort in. After regular use, the muscles in your legs will become more flexible. Work to your but it is very important to maintain a steady tempo throughout. The rate of work should be sufficient to raise your heart beat into the target zone shown on the graph below.

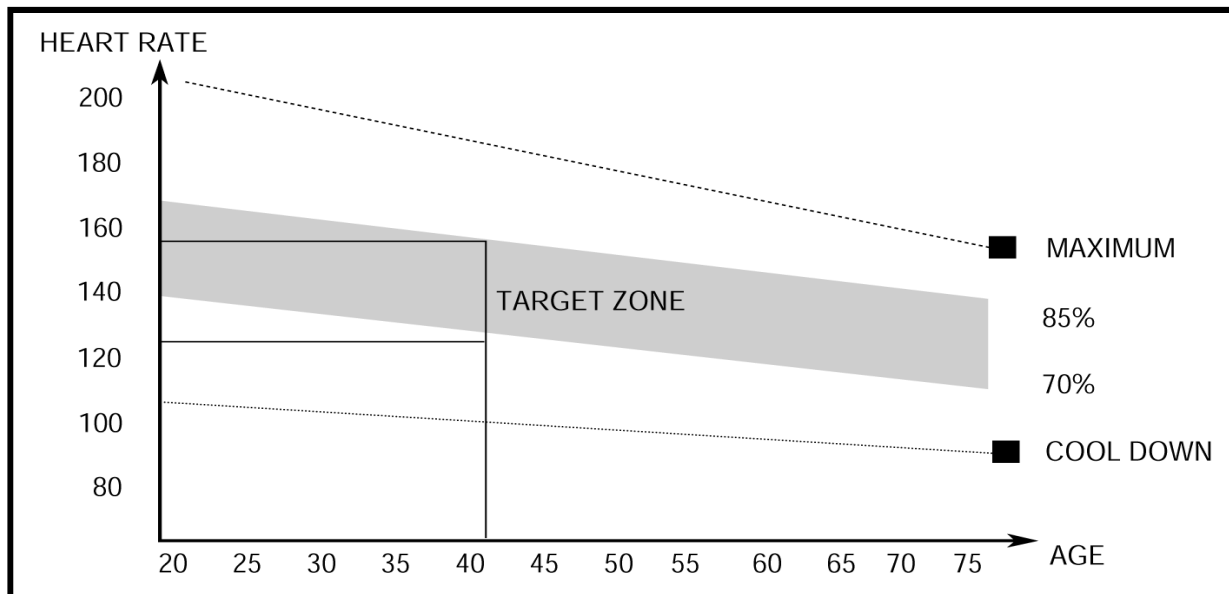

This stage should last for a minimum of 12 minutes though most people start at about 15-20 min.

### **3. The Cool Down Phase**

This stage is to let your cardio-vascular system and muscles wind down. This is a repeat of the warm up exercise e.g. reduce your tempo, continue for approximately 5 minutes. The stretching exercises should now be repeated, again remembering not to force or jerk your muscles into the stretch.

As you get fitter you may need to train longer and harder. It is advisable to train at least three times a week, and if possible space your workouts evenly throughout the week.

### **MUSCLE TONING**

To tone muscle while on your **REGENERATING MAGNETIC ELLIPTICAL BIKE** you will need to have the resistance set quite high. This will put more strain on our leg muscles and may mean you cannot train for as long as you would like. If you are also trying to improve your fitness you need to alter your training program. You should train as normal during the warm up and cool down phases, but towards the end of the exercise phase you should increase resistance making your legs work harder. You will have to reduce your speed to keep your heart rate in the target zone.


### **WEIGHT LOSS**

**The important factor here is the amount of effort you put in. The harder and longer you work the more calories you will burn. Effectively this is the same as if you were training to improve your fitness, the difference is the goal.**


## IMPORTANT ASSEMBLY INFORMATION

- ❖ Tools required for assembling the bench: two adjustable wrenches and Allen wrenches.
- ❖ NOTE: it is strongly recommended that this equipment is assembled by two or more people to avoid possible injury.
- ❖ Ensure **carriage bolts** are inserted through the **SQUARE holes** on components that need to be assembled. Attach washer only to end of the carriage bolt.
- ❖ Use **Allen bolts or hex. bolts** inserted through the **ROUND hole** on components that need to be assembled.
- ❖ Always wait until all bolts are assembled onto the bench before tightening the bolts. Do not tighten each bolt right after it is installed.

### Fasten Nuts and Bolts

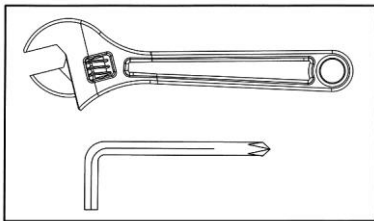

**Securely tighten all nuts and bolts after all components have been assembled in current and previous steps. NOTE: do not over tighten any component with pivoting function. Make sure all pivoting components are able to move freely.**

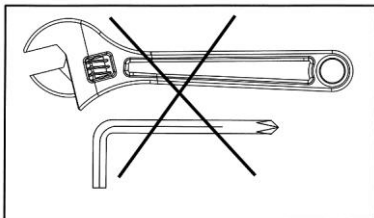

**Do not tighten all nuts and bolts in this step.**

## CARE AND MAINTENANCE

1. Lubricate moving parts with WD-40 or light oil periodically.
2. Inspect and tighten all parts before using the equipment.
3. The equipment can be cleaned using a damp cloth and mild non-abrasive detergent.  
DO NOT use solvents.
4. Examine the equipment regularly for signs of damages or wear.
5. Replace any defective components immediately and/or keep the equipment out of use until repair.
6. **Failure to examine regularly may affect the safety level of the equipment.**

## WEIGHT CAPACITY AND DIMENSION

1. Maximum user weight: 135 kg
2. Assembled dimension in cm: 135 long x 63 wide x 160 high
3. Product Weight: 41.7kg

## CONSOLE INSTRUCTIONS



### \*\*\* Important Notice \*\*\*

This product has self-generating batteries included and it is strongly recommended that your Exercise Machine is used for 10-15 minutes before the first use so that its power is generated to activate the LCD display, tension, and speed correctly.

If left unused for a long period of time, this process will need to be repeated.

### \*\*\* Mph or Kph \*\*\*

1. Press and hold down PULSE RECOVERY and ENTER
2. Start pedalling to turn the screen on
3. Once in the debug mode (number flashing), press ENTER until you reach KPH or MPH
4. Press UP or DOWN to switch between KPH and MPH
5. Press ENTER until you exit the debug mode

## **A. Program select and setting value**

1. Use the UP or DOWN keys to select program mode then press ENTER to confirm your exercise mode.
2. In the manual mode, use the UP or DOWN keys to set up your exercise TIME, DISTANCE, CALORIES, PULSE.
3. Press the START/STOP key to start or stop exercise.
4. When you reach the target, the computer will beep then stop.
5. If you set up more than one target and you would like to reach next target, press START/STOP key to keep on exercising.

## **B. Wake-Up Function**

The monitor will enter SLEEP mode (LCD off) after 4 minutes of inactivity. Start pedaling or press any button to start the monitor.

### Functions and Features:

1. TIME: shows your elapsed workout time in minutes and seconds. Your computer will automatically count up from 0:00 to 99:59 in one second intervals. You can also program your computer to count down from a set value by using the UP and DOWN keys. If you continue exercising once the time has reached 0:00, the computer will begin beeping, and reset itself to the original time set, letting you know your workout has completed.
2. DISTANCE: displays the cumulative distance traveled during each workout up to a maximum of 99.9 MILE.
3. RPM: your pedaling speed.
4. WATT: the amount of mechanical power the computer is receiving from your exercise.
5. SPEED: displays your workout speed value in MILES per hour.
6. CALORIES: your computer will estimate the cumulative calories burned at any given time during your workout.
7. PULSE: your computer displays your pulse rate in beats per minute during your workout. Pulse function works with hand-pulse. The receiver inside of meter is compatible with Polar 5 kHz chest belt.
8. AGE: your computer is age-programmable from 10 to 99 years. If you do not set an age, this function will always default to age 35.
9. TARGET HEART RATE (TARGET PULSE): the heart rate you should maintain is called your Target Heart Rate in beats per minute.
10. PULSE RECOVERY: during the START stage, hold onto the pulse grips with your hands then press "PULSE RECOVERY" key, time starts counting from 00:60 - 00:59 - - to 00:00. As soon as 00:00 is reached, the computer will show your heart rate recovery status with the grade F1.0 to F6.0.

**1.0 means OUTSTANDING**

**1.0 < F < 2.0 means EXCELLENT**

**2.0 ≤ F ≤ 2.9 means GOOD**

**3.0 ≤ F ≤ 3.9 means FAIR**

**4.0 ≤ F ≤ 5.9 means BELOW AVERAGE**

**6.0 means POOR**

**Note:** if no pulse signal input then the computer will show "P" on the PULSE window. If the computer shows "ERR" on message window, please press the PULSE RECOVERY key and place your hands on the pulse grip.

11. DISTANCE BAR: every bar indicates 100 meter or 0.1 mile.



There are 6 buttons as follows:

1. START/STOP key:
  - a. Quick Start function: allows you to start the computer without selecting a program. Manual workout only. Time automatically begins to count up from zero
  - b. During the exercise mode, press the key to STOP exercise.
  - c. During the stop mode, press the key to START exercise.
2. UP key:
  - a. Press the key to increase the resistance during exercise mode.
  - b. During the setting mode, press the key to increase the value of Time, Distance, Calories, Age and select Gender and Program.
3. DOWN key:
  - a. Press the key to decrease the resistance during exercise mode.
  - b. During the setting mode, press the key to decrease the value of Time, Distance, Calories, Age and select Gender and Program.
4. ENTER key:
  - a. During the setting mode, press the key to accept the current data entry.
  - b. At the stop mode, by holding this key for over two seconds the user can reset all values to zero or default value.
  - c. During Setting the Clock, press this key can accept the setting hour and setting minute.
5. BODY FAT key:

Press the key to input your HEIGHT, WEIGHT, GENDER and AGE then to measure your body fat ratio.
6. PULSE RECOVERY key:

Press the key to activate heart rate recovery function.

Program Introduction & Operation:

**Manual Program:**

P1 is a manual program. User can start exercise by pressing START/STOP key. The default resistance level is 5. Users may exercise in any resistance level (Adjusting by UP/DOWN keys during the workout) with a period of time or a number of calories or a certain distance.

**Operations:**

1. Use UP/DOWN keys to select the MANUAL (P1) program.
2. Press the ENTER key to enter MANUAL program.
3. The TIME will flash, and you can press UP or DOWN keys to set your exercise TIME. Press ENTER key to confirm your desired TIME.
4. The DISTANCE will flash, and you can press UP or DOWN keys to set your target DISTANCE. Press ENTER key to confirm your desired DISTANCE.
5. The CALORIES will flash, and you can press UP or DOWN keys to set your exercise CALORIES. Press ENTER key to confirm your desired CALORIES.
6. The PULSE will flash and then you can press UP or DOWN keys to set your exercise PULSE. Press ENTER key to confirm your desired Pulse.
7. Press the START/STOP key to begin exercise.

**Preset Program: Steps, Hill, Rolling, Valley, Fat Burn, Ramp, Mountain, Intervals, Random, Plateau, Fartlek, Precipice**

PROGRAM 2 to PROGRAM 13 are the preset programs. Users can exercise with different level of resistance in different intervals as the profiles show. Users may exercise in any resistance level (Adjusting by UP/DOWN keys during the workout) within a period of time or a set number of calories or a set distance.

**Operations:**

1. Use UP/DOWN keys to select one of the above programs from P2 to P13.
2. Press the ENTER key to enter your workout program.
3. The TIME will flash, and you can press UP or DOWN keys to setting your exercise TIME. Press ENTER key to confirm your desired TIME.
4. The DISTANCE will flash, and you can press UP or DOWN keys to setting your target DISTANCE. Press ENTER key to confirm your desired DISTANCE.
- 5 The CALORIES will flash, and you can press UP or DOWN keys to setting your exercise CALORIES. Press ENTER key to confirm your desired
6. The PULSE will flash and then you can press UP or DOWN keys to set your exercise PULSE. Press ENTER key to confirm your desired Pulse.
7. Press the START/STOP key to begin exercise.

### **User Setting Program: User 1, User 2, User 3, User 4**

Program 14 to 17 are the user setting program. Users are free to create the values in the order of TIME, DISTANCE, CALORIES and the resistance level in 10 columns. The values and profiles will be stored in the memory after setup. Users may also change the ongoing loading in each column by UP/DOWN keys, and they will not change the resistance level stored in the memory.

#### **Operations:**

1. Use UP/DOWN keys to select the USER program from P14 to P17.
2. Press the ENTER key to enter your workout program.
3. The column 1 will flash, and then use the UP/DOWN keys to create your personal exercise profile. Press ENTER to confirm your first column of exercise profile. The default level is load 1.
4. The column 2 will flash, and then use the UP/DOWN keys to create your personal exercise profile. Press ENTER to confirm your second column of exercise profile.
5. Follow the above description 5 and 6 to finish your personal exercise profiles. Press ENTER to confirm your desired exercise profile.
6. The TIME will flash, and you can press UP or DOWN keys to set your exercise TIME. Press ENTER key to confirm your desired TIME.
7. The DISTANCE will flash, and you can press UP or DOWN keys to set your target DISTANCE. Press ENTER key to confirm your desired DISTANCE.
8. The CALORIES will flash, and you can press UP or DOWN keys to set your exercise CALORIES. Press ENTER key to confirm your desired CALORIES.
9. The PULSE will flash and then you can press UP or DOWN keys to set your exercise PULSE. Press ENTER key to confirm your desired Pulse.
10. Press the START/STOP key to begin exercise.

### **Heart Rate Control Program: 55% H.R.C., 65% H.R.C., 75% H.R.C., 85% H.R.C., Target H.R.C.**

Program 18 to Program 22 is the Heart Rate Control Programs and Program 22 is the Target Heart Rate Control program.

Program 18 is the 55% Max H.R.C. - - Target H.R. =  $(220 - \text{AGE}) \times 55\%$

Program 19 is the 65% Max H.R.C. - - Target H.R. =  $(220 - \text{AGE}) \times 65\%$

Program 20 is the 75% Max H.R.C. - - Target H.R. =  $(220 - \text{AGE}) \times 75\%$

Program 21 is the 85% Max H.R.C. - - Target H.R. =  $(220 - \text{AGE}) \times 85\%$

Program 22 is the Target H.R.C. - - Workout by your target heart rate value.

Users can exercise according to your desired Heart Rate program by setting your AGE, TIME, DISTANCE, CALORIES or TARGET PULSE. In these programs, the computer will adjust the resistance level according to the heart rate detected.

For example, the resistance level may increase every 20 seconds while the heart rate detected is lower than the TARGET H.R.C. Also, the resistance level may decrease every 20 seconds while the heart rate detected is higher than the TARGET H.R.C.

#### **Operations:**

1. Use UP/DOWN keys to select one of the heart rate control programs from P18 to P22.
2. Press the ENTER key to enter your workout program
3. The AGE will flash at P18 to P21 programs and you can press UP or DOWN keys to set your AGE. The default age is 35.
4. At program 22, the TARGET PULSE will flash, and you can press UP or DOWN keys to set your TARGET PULSE between 80 to 180. The default TARGET PULSE is 120.
5. The TIME will flash, and you can press UP or DOWN keys to set your exercise TIME. Press ENTER key to confirm your desired TIME.
6. The DISTANCE will flash, and you can press UP or DOWN keys to set your target DISTANCE. Press ENTER key to confirm your desired DISTANCE.
7. The CALORIES will flash, and you can press UP or DOWN keys to set your exercise CALORIES. Press ENTER key to confirm your desired CALORIES.
8. Press the START/STOP key to begin exercise.

### **Watt Control Program: Watt Control**

Program 23 is a Speed Independent Program. Press ENTER key to set up the values of TARGET WATT, TIME, DISTANCE and CALORIES. During the exercise mode, the level of resistance is not adjustable. For example, the level of resistance may increase while the speed is too slow. Also, the level of resistance may decrease while the speed is too fast. As a result, the calculated value of WATT will close to the value of TARGET WATT setup by users.

#### **Operations:**

1. Use UP or DOWN key to select the WATT CONTROL (P23) program.
2. Press ENTER key to enter your workout program.
3. The TIME will flash, and you can press UP or DOWN key to set your exercise TIME. Press ENTER key to confirm your desired TIME.
4. The DISTANCE will flash, and you can press UP or DOWN key to set your target DISTANCE. Press ENTER key to confirm your desired DISTANCE.
5. The WATT will flash, and you can press UP or DOWN key to set your target WATT value. Press ENTER key to confirm your target WATT. The default WATT value is 100.
6. The CALORIES will flash, and you can press UP or DOWN key to set your exercise CALORIES. Press ENTER key to confirm your desired CALORIES.
7. The PULSE will flash and then you can press UP or DOWN keys to set your exercise PULSE. Press ENTER key to confirm your desired Pulse.
8. Press the START/STOP key to begin exercise.

**NOTE:** 1.  $WATT = TORQUE (kgm) * RPM * 1.03$

In this program, the WATT value will keep constant value. It means that if you peddle quickly, the resistance level will decrease and if you peddle slowly, the resistance level will increase. Always try to keep you in the same watt value.

### **Body Fat Program: Body Fat**

Program 24 is a special program design to calculate users' body fat ratio and to offer a specific loading profile for users. There are 3 body types divided according to the FAT% calculated.

Type1: BODY FAT% > 27

Type2:  $27 \geq \text{BODY FAT\%} \geq 20$

Type3: BODY FAT % < 20

The computer will show the test results of FAT PERCENT

#### **Operations:**

1. Use UP/DOWN keys to select the BODY FAT (P24) program.
2. Press the ENTER key to enter your workout program.
3. The HEIGHT will flash, and you can press UP or DOWN keys to set your HEIGHT. Press ENTER key to confirm your HEIGHT. The default HEIGHT is 170 cm or 5'07" (5 feet 7 inches).
4. The WEIGHT will flash, and you can press UP or DOWN keys to set your WEIGHT. Press ENTER key to confirm your WEIGHT. The default WEIGHT is 70 kg or 155 lbs.
5. The GENDER will flash, and you can press UP or DOWN keys to select your sex. Number 1 means man and number 0 means female. Press ENTER key to confirm your Gender. The default sex is 1 (MAN).
6. The AGE will flash, and you can press UP or DOWN keys to set your AGE. Press ENTER key to confirm your AGE. The default AGE is 35.
7. Press the START/STOP key to begin body fat measurement. If the window shows E on the window, please make sure your hands are attached well on the grips or the chest belt is touch well on your body. Then press the START/STOP key again to begin body fat measurement.
8. After finished your measurement, the computer will show the values of FAT PERCENT on the LCD display.
9. Press START/STOP key to begin exercise.

#### **Operation guide:**

1. **Sleep Mode:**

The computer will enter the sleep mode when there is no signal input and no keys be pressed after 4 minutes. You can press any key to wake up the computer.

Error Message:

E1 (ERROR 1):

**Normal state:** During workout, when the monitor did not get the count signal from the gear motor more than 4 seconds and check under successive 3 times then the LCD will show E1.

**Power on state:** The gear motor will return to zero automatically, when the signal of motor cannot be detected for more than 4 seconds then the gear motor's driver will be cut off immediately and show the E1 on the LCD display.

All the other digital and function mark are blank, and the output signals are cut off also.

E2 (ERROR 2): When the monitor read the memory data, if the I.D. code is not correct or the memory IC damages then the monitor will show E2 immediately at power on.


E3 (ERROR 3): After 4 seconds by start mode, the computer detects the faulty motor did not leave the zero point then the LCD bar displays "E3".

LCD Workout Graphics

PRESET PROGRAM PROFILES:


PROGRAM 1

**MANUAL**

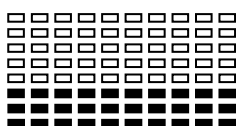


PROGRAM 2

**STEPS**

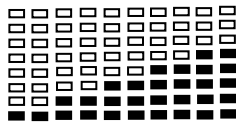


PROGRAM 3

**HILL**

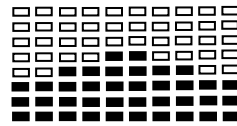


PROGRAM 4

**ROLLING**

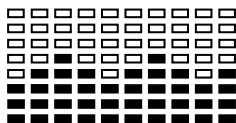


PROGRAM 5

**VALLEY**

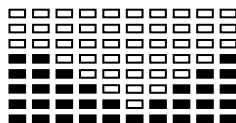


PROGRAM 6

**FAT BURN**

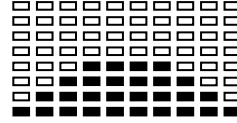


PROGRAM 7

**RAMP**

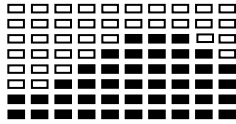


PROGRAM 8

**MOUNTAIN**

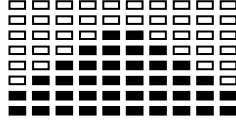


PROGRAM 9

**INTERVALS**

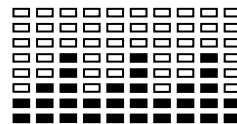


PROGRAM 10

**RANDOM**

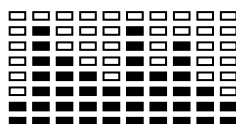


PROGRAM 11

**PLATEAU**

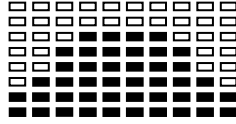


PROGRAM 12

**FARTLEK**

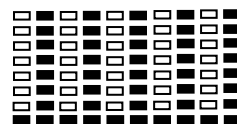

PROGRAM 13



**PRECIPICE**

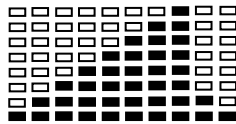

USER SETTING PROGRAM



PROGRAM 14

**USER 1**

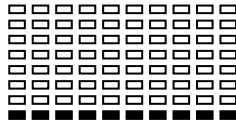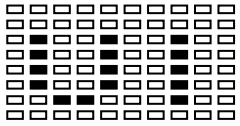



PROGRAM 15

**USER 2**

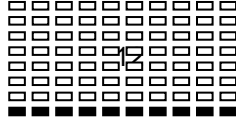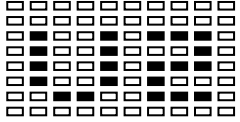



PROGRAM 16

**USER 3**

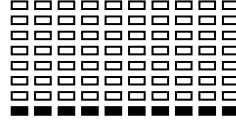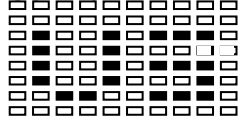

PROGRAM 17

 
 
**USER 4**



HEART RATE PROGRAM PROFILES:



PROGRAM 18

**55% H.R.C.**

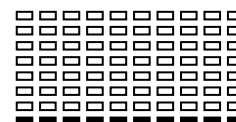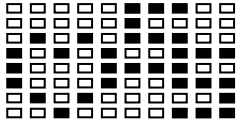



PROGRAM 19

**65% H.R.C.**

  



PROGRAM 20

**75% H.R.C.**

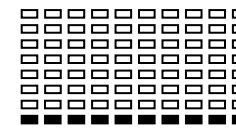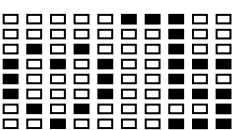



PROGRAM 21

**85% H.R.C.**

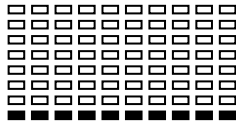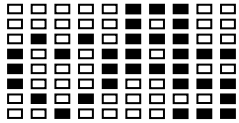

PROGRAM 22




**TARGET H.R.C.**

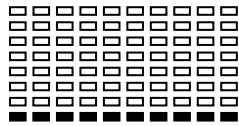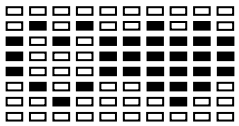

WATT CONTROL PROGRAM

PROGRAM 23


**WATT CONTROL**

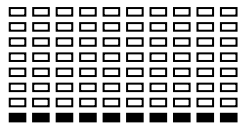  



BODY FAT TEST PROGRAMS:

PROGRAM 24


**BODY FAT (STOP MODE)**

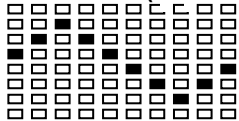


**BODY FAT (START MODE)**

 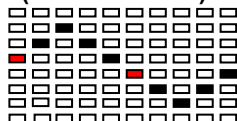


One of the Following Six Profiles Will Display Automatically after Measuring Your BODY FAT:

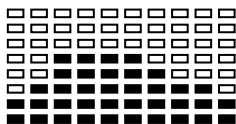


Workout Time: 40 minutes

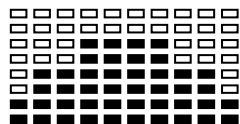


Workout Time: 40 minutes

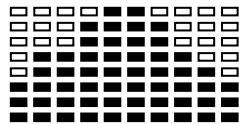


Workout time: 20 minutes

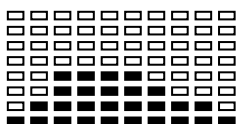

Workout Time: 40 minutes

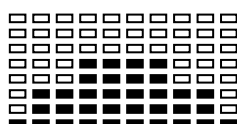

Workout Time: 40 minutes

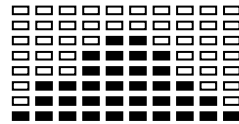

Workout time: 20 minutes

**PARTS LIST**


<b>Part No.</b>	<b>Description</b>	<b>Q'ty</b>
1	Main frame with 7 kg Flywheel	1
2	Rear stabiliser	1
3	Curved washer	9
4	Allen screw M8 x 2 <sup>1</sup> / <sub>8</sub> "	4
5	End cap for rear stabiliser	2
6	Hex bolt M8 x 1 <sup>3</sup> / <sub>4</sub> "	4
7	Left pedal	1
8	Left pedal tube	1
9	Spindle washer $\Phi$ 2"	2
10	Flat washer $\Phi$ <sup>7</sup> / <sub>8</sub> "	4
11	End cap for pedal tube	2
12	Allen screw M8 x <sup>3</sup> / <sub>4</sub> "	4
13	Lock knob	4
14	Sleeve	2
15	Hex bolt M10	2
16	Flat washer $\Phi$ 2"	2
17	Flat washer $\Phi$ <sup>3</sup> / <sub>8</sub> "	4
18	Aircraft nut M10	2
19	End cap for front stabilizer (L)	1
20	Front stabilizer	1
21	End cap for front stabilizer (R)	1
22	Cover for Front post	1
23	Sleeve for pedal	4
24	Allen screw M8 x <sup>5</sup> / <sub>8</sub> "	5
25	Plastic spacer for pedal tube	4
26	Left bottom handlebar	1
27	Plastic spacer	6
28	Spindle washer $\Phi$ 1 <sup>5</sup> / <sub>8</sub> "	2
29	Cover for pedal tube L/R	2/2
30	End cap for bottom handlebar	2
31	Hex head screw M10 x 1"	2
32	Front post	1
33	Lock washer $\Phi$ <sup>3</sup> / <sub>8</sub> "	9
34	Carriage bolt <sup>1</sup> / <sub>2</sub> "	4
35	Allen bolt M6 x <sup>3</sup> / <sub>4</sub> "	4
36	Left handlebar	1
37	Foam grip handlebar	2
38	End cap for top handlebar	2
39	Foam grip for stationary grip	1
40	Stationary grip	1
41	Phillip screw M5 x <sup>1</sup> / <sub>2</sub> "	2
42	Hand pulse sensor	2
43	Washer $\Phi$ <sup>1</sup> / <sub>8</sub> "	2
44	Self-tapping screw ST4	2


45	Screw for console M5 x 3/8"	4
46	Console	1
47	Right handlebar	1
48	Grommet	1
49	Right bottom handlebar	1
50	Right pedal	1
51	Right pedal tube	1
52	Lower console wire	1
53	Sensor wire	1
54	Upper console wire	1
55	Power wire	1
56	Motor cable	1
57	Motor	1
58	Hand pulse wire	2
59	Decorative ring for pedal tube axle	2
60	End cap for run disc	2
61	Flange screw	2
62	Run disc	2
63	Support tube for run disc	2
64	Self-tapping screw ST5 x 1/2"	27
65	Inner cover for run disc	2
66	Fixed plate	2
67	Allen screw M6 x 3/4"	4
68	Self-tapping screw ST5 x 3/8"	8
69	Main frame cover (R)	1
70	Self-tapping screw ST5 x 1/2"	8
71	Right chain cover	1
72	Allen bolt M6 x 1/2"	4
73	Axle for pulley	1
74	Pulley	1
75	Aircraft nut M6	4
76	C-clip $\Phi$ 5/8"	2
77	Bearing 6203	2
78	Sensor bracket	1
79	Spring for magnet assembly	1
80	Hex nut M6	2
81	Hex bolt M6 x 1"	1
82	Axle for flywheel	1
83	C-clip $\Phi$ 1/2"	2
84	Bearing 6001	2
85	Flywheel	1
86	Flange nut	1
87	Magnet assembly	1
88	Main frame cover (L)	1
89	Left chain cover	1
90	Phillip screw M5 x 3/8"	4




91	Self-tapping screw ST5 x 1/2"	2
92	Aircraft nut M8	2
93	Allen bolt M8 x 2"	1
94	Washer $\Phi^{3/8}$ "	1
95	Idler wheel	1
96	Spring for idler wheel	1
97	Eye bolt	1
98	Hex nut M8	1
99	Spacer	1
100	Allen bolt M8 x 3/4"	1
101	Belt	1
102	Ring	1
103	Generator	1
104	Front stationary handlebar cover	1
105	Rear stationary handlebar cover	1
106	Self-tapping screw ST4 x 1/2"	2
107	Middle Hand pulse wire	2
108	Audio wire	1

# EXPLODED DIAGRAM

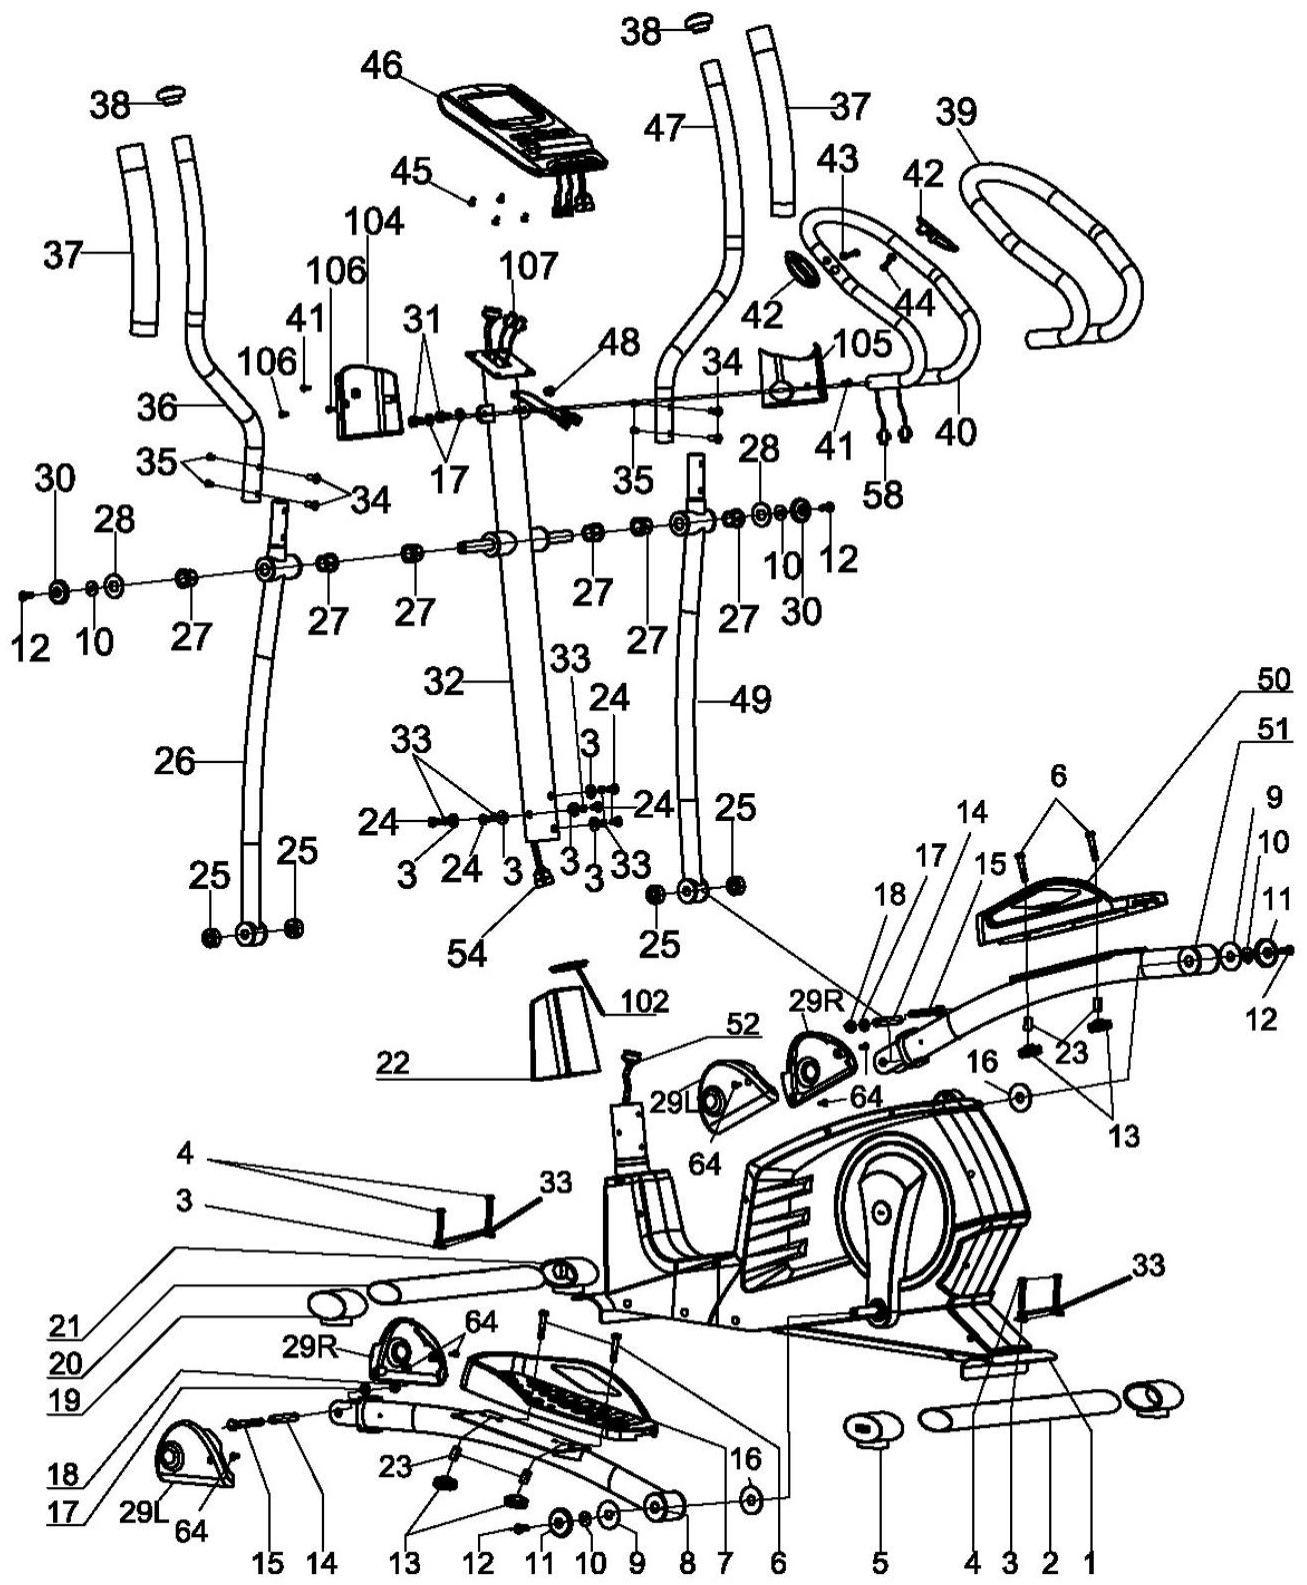

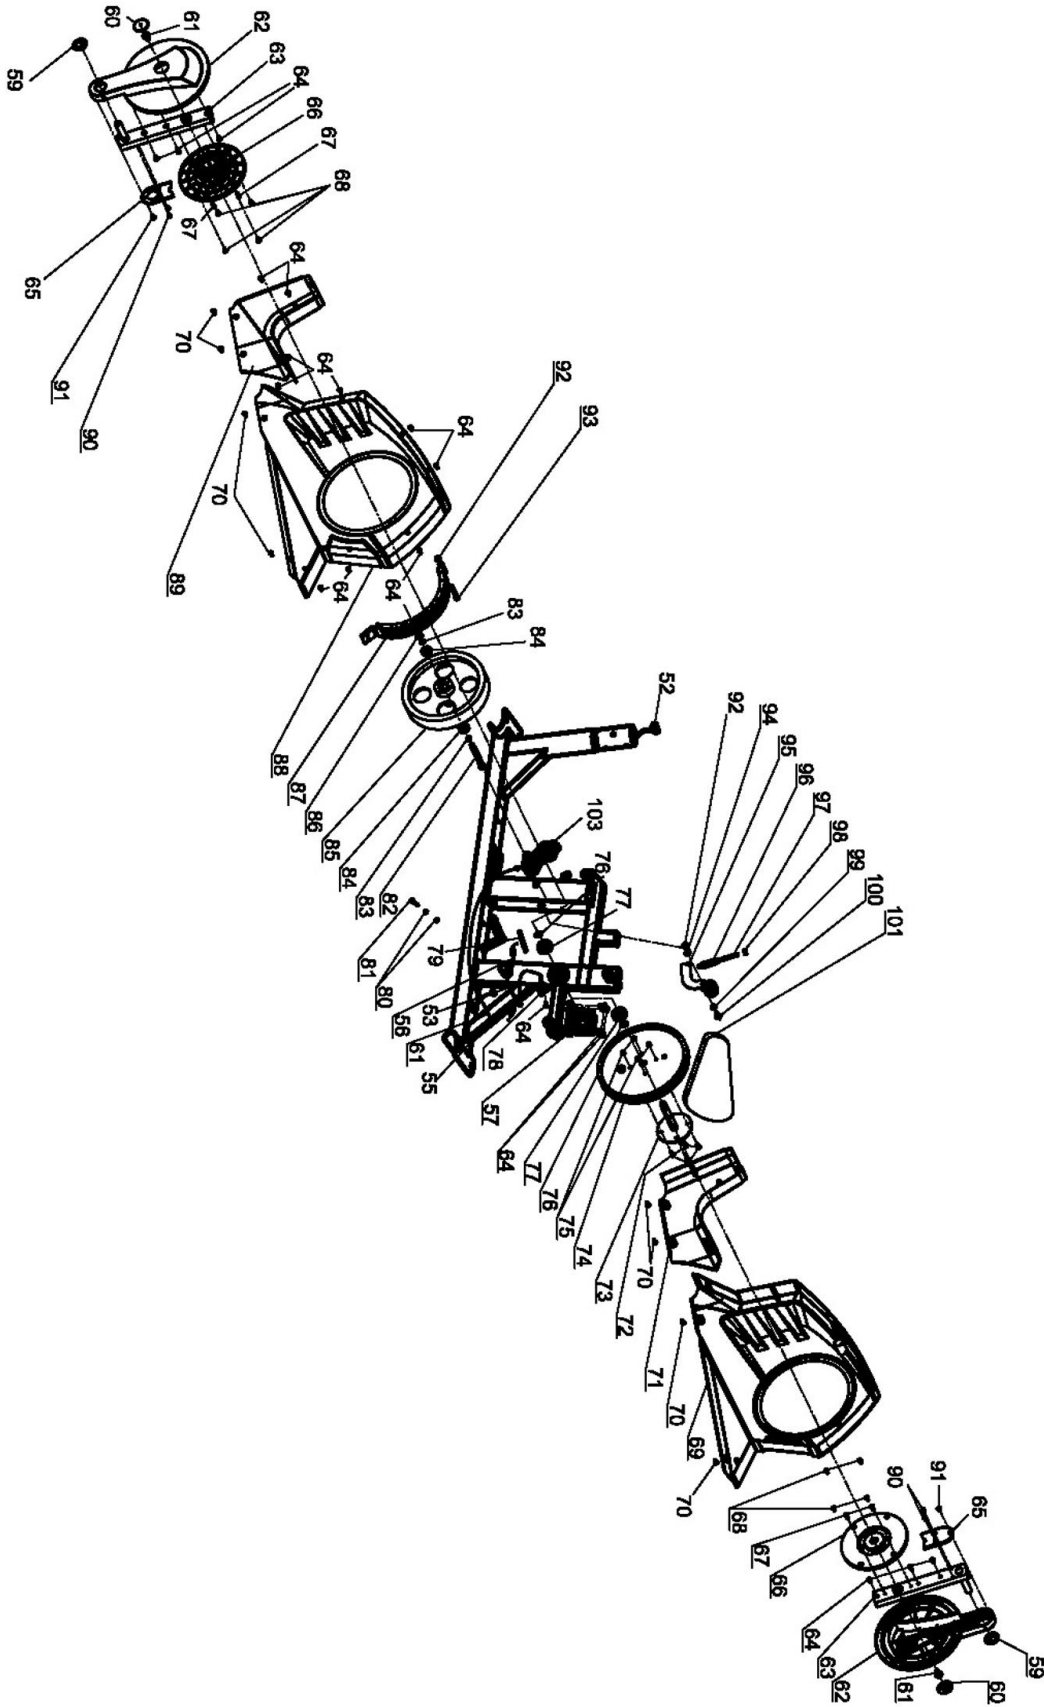




 
 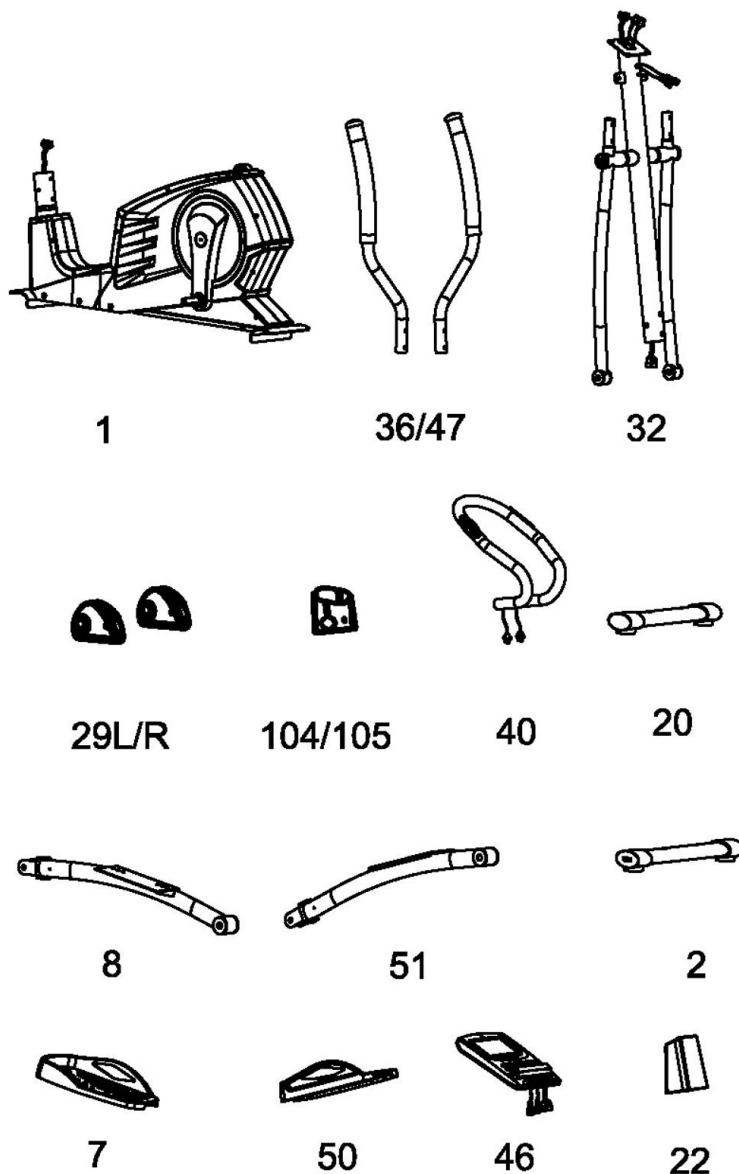







 

 
 
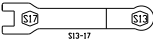


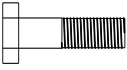

## PRE-ASSEMBLY CHECK LIST



Part No.	Description	Q'ty
1	Main frame with 7kg Flywheel	1
2	Rear stabiliser	1
7	Left pedal	1
8	Left pedal tube	1
20	Front stabiliser	1
22	Cover for front post	1
32	Front post	1
29L/R	Cover for pedal tube L/R	1/1
36/47	L/R Handlebar	1/1
40	Stationary grip	1
46	Console	1
50	Right pedal	1
51	Right pedal tube	1
104/105	Front/Rear stationary handlebar cover	1/1
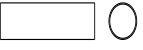
## HARDWARE PARTS LIST

No.	Description	Drawing	Q'ty
3	Curved washer		9
4	Allen screw M8 x 2"		4
6	Hex bolt M8 x 1 3/4"		4
9	Spindle washer Φ2"		2
10	Flat washer Φ7/8"		2
11	End cap for pedal tube		2
12	Allen screw M8 x 3/4"		2
13	Lock knob		4
14	Sleeve		2
15	Hex bolt M10		2
16	Flat washer Φ2"		2
17	Flat washer Φ3/8"		2
18	Aircraft nut M10		2
23	Sleeve for pedal		4
24	Allen screw M8 x 5/8"		5
33	Lock washer Φ3/8"		9
34	Carriage bolt 3/4"		4
35	Allen bolt M6 x 1/2"		4
	Box wrench		2
	Allen key 6mm		1
	Allen key 4mm		1

# LIMITED WARRANTY

Pure-Tec warrants this product to be free from defects in workmanship and material, under normal use and service conditions. Please refer to [www.puretecfitness.com](http://www.puretecfitness.com) for warranty terms. This warranty extends only to the original purchaser and is valid for home use only. Pure-Tec's obligation under this Warranty is limited to replacing damaged or faulty parts at Pure-Tec's option.

All returns must be pre-authorized by Pure-Tec. This warranty does not extend to any product or damage to a product caused by or attributable to freight damage, abuse, misuse, improper or abnormal usage, purchasers own repairs or for products used for commercial or rental purposes. No other warranty beyond that specifically set forth above is authorized by Pure-Tec.

Pure-Tec is not responsible or liable for indirect, special or consequential damages arising out of or in connection with the use or performance of the product or other damages with respect to any economic loss, loss of property, loss of revenues or profits, loss of enjoyments or use, costs of removal, installation or other consequential damages or whatsoever natures.

The warranty extended hereunder is in lieu of any and all other warranties and any implied warranties of merchantability or fitness for a particular purpose is limited in its scope and duration to the terms set forth herein.

Your statutory rights are not affected.

## **ORDERING REPLACEMENT PARTS**

Replacement parts can be ordered by contacting our Customer Solutions Department.

**Pure-Tec Limited**  
[www.puretecfitness.com](http://www.puretecfitness.com)

**Email: [service@puretecfitness.com](mailto:service@puretecfitness.com)**

When ordering replacement parts, please give the following information,

1. Model
2. Description of parts
3. Part number
4. Date of purchase