

KIRKLAND
Signature

FIT TECHNOLOGY

ADJUSTMENT INSTRUCTIONS

1. Place the end of the grip on the ground while holding the club head.
2. Set the wrench tip into the hosel screw. Turn the wrench counterclockwise to loosen the screw. As you loosen the screw, apply slight pressure upwards on the head to disengage the hosel sleeve adapter.
3. Remove shaft from head and rotate shaft and sleeve to desired setting.
4. Line up the desired setting to dot on head and reinsert.
5. Tighten the screw until the wrench gives an audible click.

IMPORTANT: ENSURE THAT THE HOSEL SCREW IS COMPLETELY TIGHTENED BEFORE USE. THE HOSEL SCREW SHOULD BE TIGHTENED AFTER PURCHASE.

HOSEL SLEEVE SETTINGS

10.5D

SHAFT
END

+1

-1

• 10.5

• 10.5 Stock loft

-1 Lowers loft to 9.5°

+1 Increased loft to 11.5°

10.5D Stock loft to minimize slicing or enhance a draw

