



# CARE GUIDE

## Outdoor Fabric Furniture

### About LA Vita performance fabrics:

Maze work with La Vita Outdoor Living to produce a range of furniture made to last. They use the best performance outdoor fabrics and are high quality durable material. Solution-dyed acrylic fabrics are unique in that a liquid acrylic solution is mixed with dye, formed into a fibre, and then spun into yarn. The process creates a rich, fade resistant colour that can withstand the harshest climates.

The cushion covers are then filled using an advanced high-performance foam that is designed specifically for outdoor cushions and furniture. The porous open-cell structure allows water to drain rapidly and fresh air to circulate freely. After a heavy downpour and in good weather conditions, the furniture is ready to use within the hour.

Cleaning La Vita outdoor performance fabric range is a breeze thanks to the special La Vita Fabrics and maintenance free aluminium frames. Caring and maintaining your La Vita products will take just a few minutes and will extend the lifetime even longer.

### How to clean and care for your Outdoor Fabric

#### How do I clean my cushions?

Any spill on your outdoor fabric can be cleaned immediately with soapy water, most spills will simply wipe off with just a cloth or tissue as the fabric is made to be highly resistant.

Our outdoor fabric range is made to be left outside all year round, you may find after the winter months your set has become dirty and slightly mouldy from the changes in weather. You can simply clean your whole set using a high-pressure washer and then use our cleaning kit to bring your set back to life!

We supply cleaning kits which we have made to suit cleaning your outdoor fabric set, please look for our "Maze - Outdoor Fabric Furniture - Cleaning & Protector Kit for Outdoor Fabric"

#### I can't get this stubborn stain out, what do I do?

For a tough stain clean immediately with a mixture of:

- 150ml of bleach
- 40ml of mild soap
- 2 litres of water

#### Can my furniture be left outside all year round?


Yes, the outdoor fabric range is specifically designed to be left outside all year round, you won't even need to put away your cushions.




All Weather Fabric



Frost Resistant

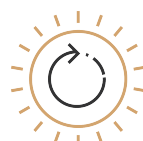

UV Resistant

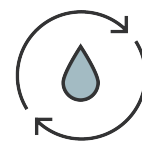

Fully Waterproof



# CARE GUIDE

## Outdoor Fabric Furniture

### **Outdoor Fabric Frames**

#### What type of metal is my furniture made from?

Our ranges are made from high strength aluminium, we powder coat the surface to give the furniture a durable finish and decorative appearance.

#### How durable is the frame when exposed to all weather?

Our frames are highly UV, water, and frost resistant. They are also light weight to easily move around your garden space.

#### How to clean your aluminium frames

During the winter months you will find your aluminium frames will collect dust and dirt if exposed outside or kept in storage.

Our frames can easily be cleaned with warm soapy water and a sponge, the frames will dry within an hour.

### **Care for your Spray Stone Tempered Glass**

#### What is Spray Stone Tempered Glass?

Spray stone glass is a safety glass and durable for being outside all year round. The glass is high in quality, and it will crumble under high pressure or excessive force but not break into dangerous shards. The spray stone finish is achieved by spraying the tempered glass with a compound of granulated natural stone and high-quality resin.

#### How can I clean my spray stone glass?

Leaving any type of glass outside, you will find it gets dirty and dusty and a mildew can build up from the weather elements changing. You can easily clean the glass with a warm soapy cloth, then use another separate cloth which is damp to polish the finish and allow to dry.

We supply cleaning kits which we have made to suit cleaning your outdoor glass tables, please look for our "Maze - Outdoor Fabric – Spray Stone Glass Cleaner"

***This product may contain plastic bags: TO AVOID DANGER OR SUFFOCATION - KEEP AWAY FROM CHILDREN THE BAG IS NOT A TOY, PLEASE DISPOSE OF THIS CAREFULLY***



# CARE GUIDE

## Outdoor Fabric Furniture

### **Caring for your Fire Pit System:**

To enjoy years of great performance from your fire pit, make sure you perform the following maintenance activities on a regular basis.

Keep exterior surfaces clean: (Wait until the fire pit is fully cooled before any cleaning)

- Use warm soapy water for cleaning. Never use flammable or corrosive cleaning agents.
- While cleaning your unit, be sure to keep the area around the burner dry.
- Do not submerge the control valve in water. If the gas control is submerged in water, do NOT use it, as it must be replaced.

Visually inspect burners before use:

- Make sure stones are dry before lighting.
- Gas odour with extreme yellow tipped flames.
- The Firepit not reaching the desired temperature.
- The Firepit making 'popping' noises.
- Keep the burner and air vents clear from obstructions.
- Spiders and insects can nest in the burner or orifices, which can damage the firepit, clean burner holes with a pipe cleaner.
- Compressed air may help clear away smaller particles.
- Always place lid or protective cover on heating element when not in use.
- DO NOT leave the fire pit connected to the gas bottle when not in use.

Please note: Wait until the fire pit is fully cooled before storing or covering your fire pit.

***This product may contain plastic bags: TO AVOID DANGER OR SUFFOCATION - KEEP AWAY FROM CHILDREN THE BAG IS NOT A TOY, PLEASE DISPOSE OF THIS CAREFULLY***



# GENERAL INFORMATION

## Assembly Instructions

### WARNINGS

- We suggest you retain these instructions for future reference.
- Keep fittings out of children's reach and keep children away from construction area.
- Periodically check all fittings and re-tighten as necessary.
- Do not sit or stand on your table.
- Do not stand on your furniture.
- This product should only be used on firm, level ground.
- Ensure any safety locks are correctly located and locked in place for any mechanisms before use.
- Keep hands away from folding mechanisms to prevent possible entrapment or injury.
- Any folding mechanisms should only be used by competent adults.
- The glass used in this product is tempered and complies with BS EN 12150-1:2009

### DO

- We suggest you spend a short time reading through this leaflet before you start.
- When you are ready to start, make sure that you have the right tools and plenty of space.
- Unwrap all packaging materials and place the components on a clean flat surface to protect it from damage.
- Carefully check that you have all the parts before starting assembly.
- Please retain the assembly tools. You may need them in the future to re-tighten the bolts, or if you want to dismantle the furniture for storage.
- Please make sure that the product is clean and dry before putting it into storage.
- We recommend the use of furniture covers to protect your furniture when not in use. During severe weather conditions, please move your furniture inside. (eg. high winds)
- To clean your items, please use mild detergent in warm water. Rinse with clean water and dry thoroughly. Do not use abrasive cleaners, strong detergents, bleach, acid or solvents on the frame parts.
- When cleaning glass panels, use a damp cloth with washing up liquid or soft soap if necessary. Do not use washing powders or any other substances containing abrasives since these substances can scratch glass panels.
- Mop up stains/spills immediately as this may cause spot burns through glass.

### DONT

- Do not sit on the arms of your furniture.
- When moving furniture never drag the pieces across the floor, as this will cause damage to the joints.
- Do not use silicone based furniture polish.
- Do not rub or scrub any surfaces with abrasive materials.
- Use placemats and coasters to protect the surfaces.
- Do not use glass as a chopping surface.
- Do not strike the glass.
- Store away paraols when not in use.
- Do not leave reflective items on your glass.
- Do not stand the glass on its edge as that may cause damage / chips.

### ASSEMBLY

Two persons to assemble the unit and lift the unit into position.

### MISSING PARTS

If you are missing any fixtures or fittings for your product please contact customer services, referring to the part specified on the instructions.

### DAMAGES

Please unpack this product carefully. Should you need to return the item, please repack the item inside its original packaging.

Contact customer services to report your damages and they will advise of the return process.