

ITM. / ART. 6487

Gourmia®

6.7 L / 7-QT DIGITAL AIR FRYER




USER MANUAL
GAF798



IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY

FOR CUSTOMER SERVICE
QUESTIONS OR COMMENTS
VISIT WWW.GOURMIA.COM
EMAIL INFO@GOURMIA.COM
OR CALL 888.552.0033
MON-THU 9:00AM TO 6:00PM ET
AND FRI 9:00AM TO 3:00PM ET
LANGUAGES SUPPORTED: ENGLISH, SPANISH, FRENCH



Model: GAF798
© 2021 Gourmia
www.gourmia.com
The Steelstone Group
Brooklyn, NY

All rights reserved. No portion of this manual may be reproduced by any means whatsoever without written permission from The Steelstone Group, except for the inclusion of quotations in a media review.

Although every precaution has been taken in the preparation of this manual, The Steelstone Group assumes no responsibility for errors or omissions. Nor is any liability assumed for damages resulting from the use of the information contained herein. Although every effort has been made to ensure that the information contained in this manual is complete and accurate, The Steelstone Group is not engaged in rendering professional advice or services to the individual consumer; further, The Steelstone Group shall not be held responsible for any loss or damage allegedly arising from any information or suggestions in this manual.



Congratulations on the purchase of your *Digital Air Fryer* from Gourmia!

Here at Gourmia, we're all about helping cooks make easy, healthy, and delicious meals an everyday possibility. We know how fast-paced life is and that sometimes a home cooked meal doesn't make the top of the priority list, no matter how bad you want it. Our dependable, easy-to-use units are here to help you change that. We're giving you the tools to eat better and healthier without spending hours in the kitchen prepping and cooking.

We want you to get the most out of your air fryer, which is why our team is available to help with any questions you may have. Whether you have a question with setup or need some guidance on which preset to use, we're happy to walk you through it. Welcome to the ease of cooking with Gourmia.

This manual provides instructions for all of the air fryer's functions and features along with directions for assembling, operating, cleaning, and maintaining the appliance. Please read all safety instructions and directions for safe usage at all times. Keep this manual for future use.

Thank you for choosing Gourmia!

We love hearing from you! Share your thoughts, recipes, and photos with us.

@gourmia





Important Safeguards	6
Know Your Air Fryer	8
· Display and Control Panel	9
· Preheat	9
· Turn Reminder	9
· Display, °F / °C, & Sound	10
· Presets Chart	11
Before First Use	12
Using Your Air Fryer	13
Cooking Tips	16
Cleaning & Maintenance	17
Troubleshooting	18
Warranty & Service	19

IMPORTANT SAFEGUARDS

Read all instructions before using the electric appliance. The following basic precautions should always be followed:

1. This appliance shall not be used by children from 0 to 8 years.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.

Keep the appliance and its cord out of reach of children less than 8 years.
2. Check if the voltage indicated on the appliance corresponds to the local main voltage before you connect the appliance.
3. **Do not** use the appliance if the plug, the main cord or the appliance itself is damaged. **Always** make sure that the plug is inserted properly into a wall outlet.
4. **Do not** operate any appliance with a damaged cord or plug, after the appliance malfunctions, or if the appliance has been damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair, or adjustment.
5. **Do not** let the cord hang over the edge of the table or counter, nor let it touch hot surfaces.
6. To protect against electric shock, **do not** immerse cord, plugs, or appliance in water or other liquid.
7. **Do not** plug in the appliance or operate the control panel with wet hands.
8. **Never** connect this appliance to an external timer switch or separate remote-control system in order to avoid a hazardous situation. To disconnect, turn off the appliance, then remove the plug from wall outlet.
9. **Do not** place the appliance on or near combustible materials such as a tablecloth or curtain. The accessible surfaces may become hot during use. **Do not** place on or near a hot gas or electric burner, or in a heated oven.
10. **Do not** place the appliance against a wall or against other appliances. Leave at least 10 cm / 4 inches of free space on the back and sides and

10 cm / 4 inches of free space above the appliance. **Do not** place anything on top of the appliance.

11. **Do not** use the appliance for any other purpose than described in this manual. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
12. **Do not** leave the appliance unattended when plugged in.
13. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
14. **Do not** touch the hot surfaces; use the handle. During air frying, hot steam is released through the air outlet openings. Keep your hands and face at a safe

distance from the steam and from the air outlet openings. Also be careful of hot steam and air when you remove the basket from the appliance.

15. After using the appliance, avoid contact with the hot metal inside. Unplug from outlet when not in use and before cleaning. Allow the appliance to cool before cleaning.
16. Immediately unplug the appliance if you see dark smoke coming from the appliance. Wait for the smoke emission to stop before you remove the basket from the appliance.
17. **Do not** use outdoors.
18. For household use only.

CORD AND PLUG SAFETY

- A short power-supply cord is provided to reduce risk of becoming entangled in or tripping over a longer cord.
- Extension cords may be used if care is exercised in their use.
- If an extension cord is used:
 - a. The marked electrical rating of the extension cord should be at least equal to the electrical rating of the appliance; and
 - b. The longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over.

Power:	AC 220 V/240 V~ 50 Hz/60 Hz, 1500 W
--------	-------------------------------------

SAVE THESE INSTRUCTIONS

KNOW YOUR AIR FRYER

Display / Control Panel



Cord Storage
(back of unit)



Multi-Purpose Rack

The *multi-purpose rack* can be used for additional cooking space, or as a raised cooking surface.



Crisper Tray


Place the *crisper tray* into the *basket*.



Basket

KNOW YOUR AIR FRYER

DISPLAY AND CONTROL PANEL

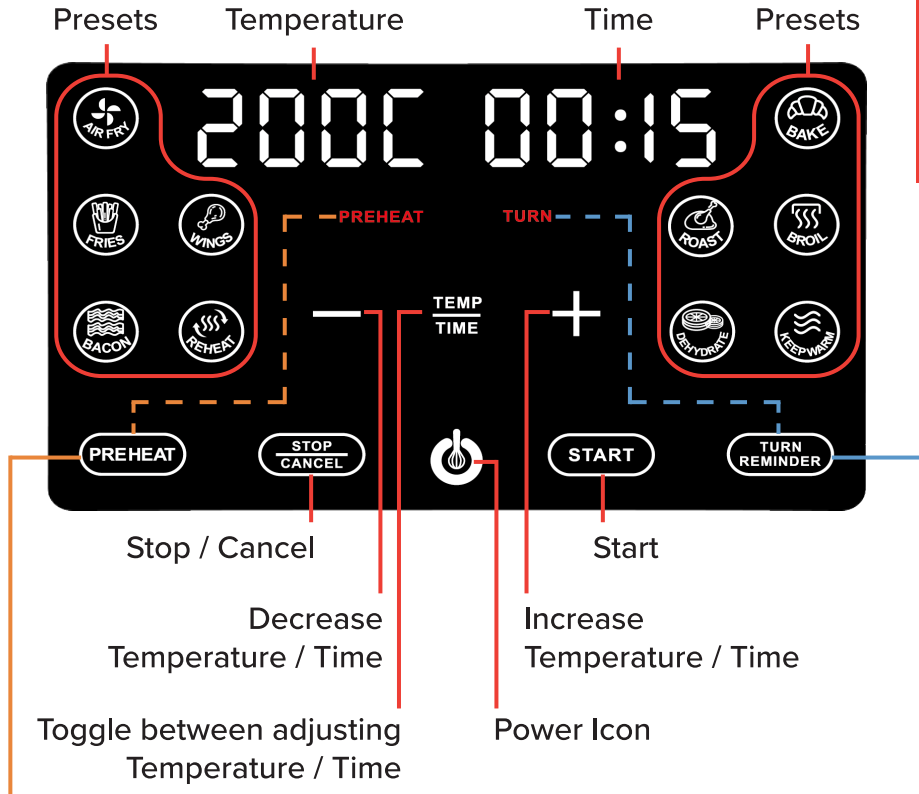

PREHEAT

When enabled, air fryer will preheat and prompt you when to add food. Tap **PREHEAT** to enable or disable preheating before tapping **START**. When preheating is enabled, **PREHEAT** appears in red on the *display*.

TURN REMINDER

When enabled, air fryer will prompt you to turn food halfway through cook time. Tap **TURN REMINDER** to enable or disable *turn reminder* before tapping **START**. When *turn reminder* is enabled, **TURN** appears in red on the *display*.

See the chart on page 11 for *presets* that have *preheat* and *turn reminder* on by default and those that have the option to toggle the settings on and off.

DISPLAY, °F / °C, & SOUND

Below are *display* indicators and notifications for *guided cooking prompts*.

PREHEAT

Preheat is enabled.

P-R-E H-E-A-T

The air fryer is preheating.

TURN

Turn Reminder is enabled.

A-d-d F-o-o-d

The air fryer is preheated.

t-u-r-n F-o-o-d

Reminder to turn or toss food.

E-n-d

The cook time has elapsed.

TOGGLE °F / °C











To toggle between displaying temperature in *Fahrenheit* and *Celsius*, press and hold **TEMP / TIME**.

MUTE AIR FRYER

To silence the air fryer's beeping sound, press and hold **STOP / CANCEL**. Press and hold **STOP / CANCEL** again to turn the sound on.

NOTE: The air fryer will still beep for *guided cooking prompts*.

PRESETS CHART

	TEMPERATURE		TIME		PREHEAT		TURN REMINDER	
	DEFAULT	RANGE	DEFAULT	RANGE	DEFAULT	TOGGLE	DEFAULT	TOGGLE
	200 °C / 400 °F	76 °C-200 °C / 170 °F-400 °F	20 min	1-60 min	on	✓	on	✓
	200 °C / 400 °F	76 °C-200 °C / 170 °F-400 °F	15 min	1-60 min	on	✓	on	✓
	200 °C / 400 °F	76 °C-200 °C / 170 °F-400 °F	25 min	1-60 min	on	✓	on	✓
	190 °C / 375 °F	76 °C-200 °C / 170 °F-400 °F	6 min	1-60 min	off	✓	off	✓
	150 °C / 300 °F	76 °C-200 °C / 170 °F-400 °F	15 min	1-60 min	off	✓	off	✓
	160 °C / 325 °F	76 °C-200 °C / 170 °F-400 °F	25 min	1 min-2 h	on	✓	off	✓
	200 °C / 400 °F	76 °C-200 °C / 170 °F-400 °F	25 min	1 min-2 h	on	✓	on	✓
	200 °C / 400 °F	200 °C / 400 °F	12 min	1-60 min	on	✓	on	✓
	56 °C / 135 °F	34 °C-76 °C / 90 °F-170 °F	8 h	30 m-24 h	off	n/a	off	✓
	94 °C / 200 °F	66 °C-94 °C / 150 °F-200 °F	30 min	1 min-8 h	off	n/a	off	n/a

NOTE: A check mark indicates *preheat* and *turn reminder* can be enabled or disabled by tapping **PREHEAT / TURN REMINDER** before tapping **START**.

BEFORE FIRST USE

1. Remove all packaging stickers and labels from the air fryer, including the tape securing the **basket** to the unit.
2. To pull out the **basket** for cleaning, remove the tape securing it into place. Secure the unit with one hand and pull the handle straight back with the other hand.
3. Thoroughly clean the **basket** and **crisper tray** with hot water, dishwashing liquid, and a non-abrasive sponge.
4. Wipe the inside chamber and outside of the air fryer with a moist cloth.

NOTE: During the first few uses, there might be a “hot plastic” smell. This is perfectly normal in new air fryers as the material is heated for the first time. It will go away after the first few uses.

WARNING:

Do not put anything on top of the air fryer.

Do not place the air fryer against a wall or against other appliances. It is important to leave at least 10 cm / 4 inches of free space around the back and sides, and 10 cm / 4 inches of free space above the air fryer to allow for proper ventilation.

Do not fill the basket with oil, frying fat, or any other liquid - this appliance works by circulating hot air.

When spraying food for a crispier finish, we recommend using regular cooking oil instead of cooking spray, as this may damage the nonstick coating.

Recommended



Oil Mister / Spray Bottle

Not Recommended




Cooking Spray

USING YOUR AIR FRYER

1. Place the air fryer on a stable, level and heat-resistant surface.
2. Place the *crisper tray* into the *basket* and slide it into the air fryer.
3. Plug the air fryer into an outlet.
4. Tap the *power icon* to turn the air fryer on.



5. Tap the desired *preset*.

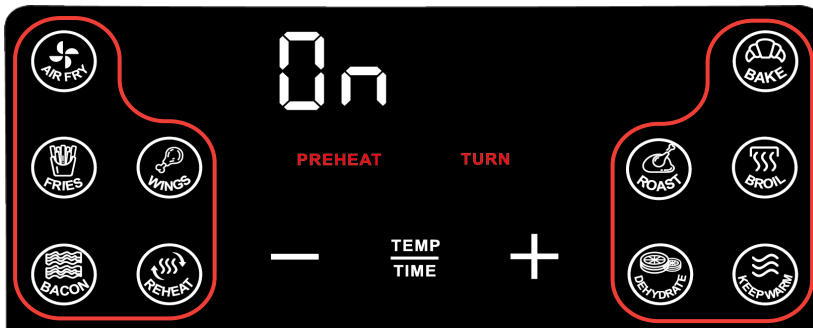

The *display* will show the *preset* temperature and time.

6. Tap **TEMP / TIME** to adjust temperature / time. Tap + and - icons to increase and decrease temperature / time.



7. Tap **PREHEAT / TURN REMINDER** to enable or disable these settings.

PREHEAT / TURN appear in red on the display when enabled.

Preheat and *turn reminder* are on by default for recommended presets.



USING YOUR AIR FRYER

8. IF PREHEAT IS ENABLED

- a. Tap **START**.

The **display** will show **PrE HERE** (Preheat) and the air fryer will begin preheating. Once preheated, the air fryer will beep and the **display** will show **Add Food** (Add Food).

WARNING: The **basket** will be hot! **Do not** touch hot surfaces.

- b. Remove the **basket** carefully, place food inside, and return it to the air fryer to automatically begin cooking.

NOTE: If the **basket** is not removed, the cook time will begin.

8. IF PREHEAT IS DISABLED

- a. Remove the **basket**, place food inside, and return it to the air fryer.
- b. Tap **START**.



IF TURN REMINDER IS ENABLED

- a. Halfway through the cook time, the air fryer will beep and the **display** will show **Turn Food** (Turn Food).
- b. Remove the **basket** carefully and place it on a heat-resistant surface.
- c. Turn or toss the food using non-metal tongs.
- d. Return the **basket** to the air fryer to automatically resume cooking.

NOTE: If the **basket** is not removed, cooking will continue.

USING YOUR AIR FRYER

When your selected cook time has elapsed, the air fryer will beep and the *display* will show **End** (End).

9. Remove the **basket** carefully and place it on a heat-resistant surface.
10. Remove food from the **basket** using non-metal tongs.

CAUTION:

Always use caution when removing the **basket** during / after cooking - hot steam may escape!

WARNING: The **basket** and food will be hot! **Do not** touch hot surfaces.

Do not use sharp or metal utensils which can scratch the nonstick surface.

Do not turn the **basket** upside down, as any excess oil that has collected on the bottom of the **basket** will leak onto the food.

STOP / CANCEL COOKING

Tap **STOP / CANCEL** to stop cooking. Tap **START** to resume cooking.

Removing the **basket** from the air fryer during cooking will stop cooking. Returning the **basket** to the air fryer will automatically resume cooking.

Tap **STOP / CANCEL** twice to cancel cooking.



TURN OFF AIR FRYER

Press and hold the **power icon** to turn off the air fryer. Unplug the air fryer from the outlet when not in use.



COOKING TIPS

- For an extensive list of foods and their ideal amounts, temperature and time settings, along with preparation notes, see the **Air Fry Cooking Chart** and **Dehydrate Chart** on pages 64 through 67 of the **Gourmia Recipe Book**.
- Air fryers perform similar to ovens; follow oven instructions on item packaging or recipe.
- Snacks that can be prepared in an oven can also be prepared in the air fryer.
- Smaller ingredients usually require a slightly shorter cook time than larger ingredients.
- Preheating the air fryer before adding food will generally deliver the best results (see **PREHEAT** on page 9).
- When cooking multiple batches in a row, only preheat before the first batch.
- Turning or tossing food halfway through cook time will deliver evenly browned and crispy results (see **TURN REMINDER** on page 9).
- Toss fresh potatoes with 1 tablespoon of oil for a crispy exterior. Air fry the ingredients within a few minutes after adding the oil.
- **Do not** cook foods that will produce a large amount of grease in the air fryer.
- Place a baking pan or an oven-safe dish or pan in the **basket** to bake a cake or quiche or to air fry fragile or filled ingredients.

CLEANING & MAINTENANCE

WARNING:

NEVER immerse cord, plug, or air fryer in water or any other liquid.

Do not use metal kitchen utensils or abrasive cleaning material to clean the **basket** or **crisper tray**, as this may damage the nonstick coating.

- Clean the air fryer after every use.
- Unplug the air fryer from the outlet before cleaning.
- Let the air fryer cool down completely before cleaning. Remove the **basket** from the air fryer to cool it down quicker.
- Clean the **basket** and **crisper tray** in the dishwasher's top rack only or with hot water, dish soap, and a non-abrasive sponge.
- If residue is stuck to the bottom of the **basket**, fill it with hot water and dish soap and let it soak.
- Wipe the outside of the air fryer with a moist cloth.
- Clean the inside of the air fryer with hot water, dish soap and a cleaning brush to remove any food residue.
- Ensure the air fryer is completely dry before using.

STORAGE

- Unplug the appliance and let it cool down.
- Make sure all parts are clean and dry.
- Store the appliance in a clean and dry place.

ENVIRONMENT

Do not throw away the appliance with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.

GUARANTEE AND SERVICE

If you need service or information or if you have a problem, please visit www.Gourmia.com or contact your distributor.

PROBLEM	POSSIBLE CAUSE	SOLUTION
The air fryer does not work.	The air fryer is not plugged in.	Plug the main plug into a grounded wall socket.
	The timer has not been set.	Tap + and - icons to set the required cook time to turn on the air fryer.
	The basket is not put into the air fryer properly.	Slide the basket into the air fryer properly.
The basket does not fit inside the air fryer.	The basket is overfilled.	Do not fill the basket beyond max line.
The ingredients did not cook.	There are too many ingredients in the basket .	Put smaller batches of ingredients in the basket . Smaller batches are fried more evenly.
	The set temperature is too low.	Tap + and - icons to set the required temperature setting.
	The cook time is too short.	Tap + and - icons to set the required cook time.
The ingredients are fried unevenly.	Certain types of ingredients need to be shaken halfway through the cook time.	Ingredients that lie on top of or across each other (e.g. fries) need to be shaken halfway through the cook time (see TURN REMINDER on page 9).
Fried snacks are not crispy.	You used a type of snack meant to be cooked in a traditional deep fryer.	Use oven snacks or lightly brush some oil onto the snacks for a crispier result.
White smoke comes out of the air fryer.	You are preparing greasy ingredients.	When you fry greasy ingredients in the air fryer, a large amount of oil will leak into the basket . The oil produces white smoke and the basket may heat up more than usual. This does not affect the air fryer or the end result.
	The basket still contains grease residue from previous use.	White smoke is caused by grease heating up in the basket . Make sure you clean the basket properly after each use.
Fresh fries are fried unevenly.	Quality potatoes will give an even cook.	Use fresh potatoes and make sure they stay firm during frying.
	Potatoes are too starchy.	Rinse the potato sticks properly and dry to remove starch from the outside of the sticks.
Fresh fries are not crispy.	The crispiness of the fries depends on the amount of oil and water in the fries.	Make sure you dry the potato sticks properly before you add the oil. Cut the potato sticks smaller for a crispier result. Add slightly more oil for a crispier result.

WARRANTY & SERVICE

This Limited Warranty is for one full year from the date of purchase and requires proof of purchase from an authorized seller. It is applicable to the original purchaser only and is not transferable to a third party user. Repair or replacement of defective parts is solely at Gourmia's discretion. In the event that repair isn't possible, Gourmia will replace the product/part. If product repair/replacement won't suffice, Gourmia has the option of refunding the cash value of the product or component returned.

Product defects not covered under the Warranty provisions include normal wear and damage incurred from use or accidental negligence, misuse of instruction specifications or repair by unauthorized parties. Gourmia is not liable for any incidental or consequential damages incurred by such circumstances.

Only valid within the United States.

Register your product at www.Gourmia.com/warranty

Get cooking with Gourmia



MADE IN CHINA

Costco Wholesale UK Ltd /
Costco Online UK Ltd
Hartspring Lane
Watford, Herts
WD25 8JS
United Kingdom
01923 213113
www.costco.co.uk

FOR CUSTOMER SERVICE
QUESTIONS OR COMMENTS
VISIT WWW.GOURMIA.COM
EMAIL INFO@GOURMIA.COM
OR CALL 888.552.0033
MON-THU 9:00AM TO 6:00PM ET
AND FRI 9:00AM TO 3:00PM ET
LANGUAGES SUPPORTED:
ENGLISH, SPANISH, FRENCH

Gourmia